

Firmware update 1.2

PowerZone Connect series

1. Download

1. Download the Firmware update file

Visit blaze-audio.com/support to download the latest Firmware update for your amplifier

Use the QR code to download the Firmware update file directly



2. Connect

2. Connect to the Amplifier via Wi-Fi


 


1. With the PowerZone Connect amplifier connected to a mains power supply, wait for the front panel Wi-Fi indicator to turn green
2. Use a mobile, laptop or desktop device to search for available Wi-Fi networks. Connect to **Blaze XXXXXXXXXXXXXXXXXXXX** (serial nr.) using the password, "password"

The amplifier's serial number is located on its rear panel.

3. Open a web browser on your device and enter the IP address:

192.168.4.1

4. The **PowerZone Control** web app interface will now open – your gateway for updating the amplifier's Firmware

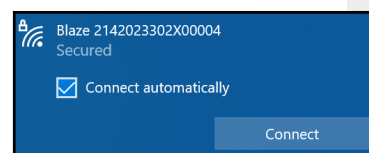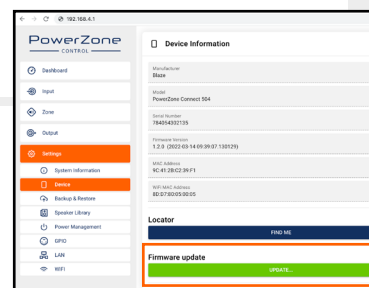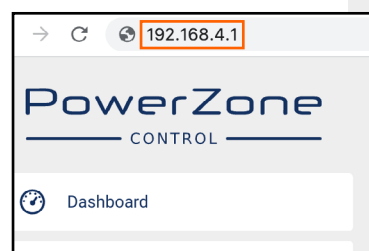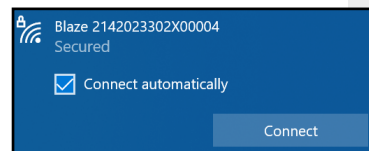

3. Update

3. Update the Firmware 1.2

1. You are now connected to the PowerZone Control web app
2. Go to Settings > Device > below **Firmware update** press "UPDATE"
3. Select the downloaded Firmware update file
4. Wait for installation to complete – the amplifier will restart itself in approx. 2 minutes
5. Reconnect to the amplifier's Wi-Fi
6. Confirm successful update by refreshing the browser and checking the Firmware Version (Settings > Device)

4. Load

4. Load a Speaker Preset from the Speaker Library

1. Download your Speaker Preset from blaze-audio.com/support
2. Connect to the amplifier and open the PowerZone Control web app
3. Go to Output > Speaker Presets > press **Import Speaker Preset**
4. Select the .zcp Speaker Preset file that you just downloaded
5. You are all set!

BLAZE