

# Firmware update 1.3

PowerZone Connect series

1. Download

## 1. Download the Firmware update file

Visit [blaze-audio.com/support](http://blaze-audio.com/support) to download the latest Firmware update for your amplifier

Use the QR code to download the latest Firmware update file



2. Connect

## 2. Connect to the Amplifier via Wi-Fi

 
 
 
1. With the PowerZone Connect amplifier connected to a mains power supply, wait for the front panel Wi-Fi indicator to turn green
2. Use a mobile, laptop or desktop device to search for available Wi-Fi networks. Connect to **Blaze XXXXXXXXXXXXXXXXXXXX** (serial nr.) using the password, "password"

*The amplifier's serial number is located on its rear panel.*

3. Open a web browser on your device and enter the IP address:

**192.168.4.1**


4. The **PowerZone Control** web app interface will now open – your gateway for updating the amplifier's Firmware

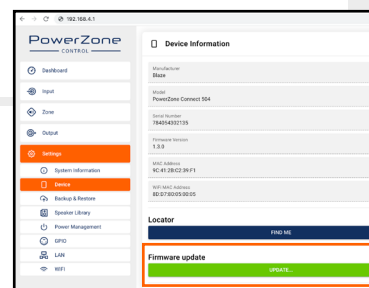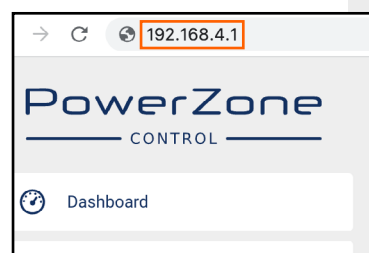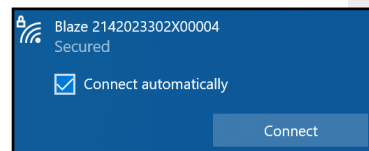

3. Update

## 3. Update the Firmware 1.3

 1. You are now connected to the PowerZone Control web app
2. Go to Settings > Device > below **Firmware update** press "UPDATE"
3. Select the downloaded Firmware update file
4. Wait for installation to complete – the amplifier will restart itself in approx. 2 minutes
5. Reconnect to the amplifier's Wi-Fi
6. Confirm successful update by refreshing the browser and checking the Firmware Version (Settings > Device)

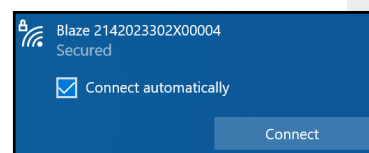

4. Load

## 4. Load a Speaker Preset from the Speaker Library

1. Download your Speaker Preset from [blaze-audio.com/support](http://blaze-audio.com/support)
2. Connect to the amplifier and open the PowerZone Control web app
3. Go to Output > Speaker Presets > press **Import Speaker Preset**
4. Select the .zcp Speaker Preset file that you just downloaded
5. You are all set!

BLAZE