

1. Download the latest firmware file

Visit blaze-audio.com/support to download the latest firmware file (.bin) for your PowerZone Connect™ amplifier.

Use the QR code for direct download of the latest firmware file (.bin)






2. Connect to the PowerZone Connect™ amplifier via Wi-Fi

1. With the PowerZone Connect™ amplifier connected to a mains power supply, wait for the front panel Wi-Fi indicator to turn green
2. Use a mobile, laptop or desktop device to search for available Wi-Fi networks. Connect to **Blaze XXXXXXXXXXXXXXXXXXXX** (serial nr.) using the password, “password”

The amplifier's serial number is located on its rear panel.

3. Open a web browser on your device and enter the IP address:
192.168.4.1

4. The **PowerZone Control™** web app interface will now open
– your gateway for updating the amplifier's firmware

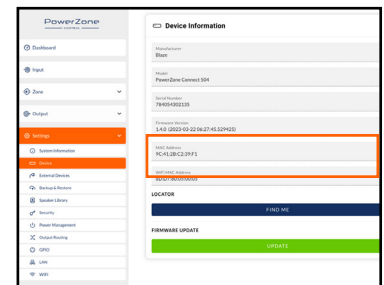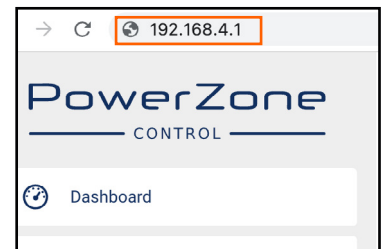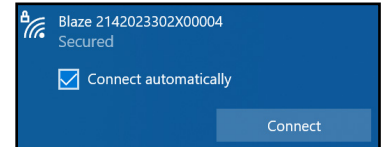

3. Update the firmware

1. You are now connected to the PowerZone Control™ web app
2. Go to Settings > Device > below **Firmware update** press “UPDATE”
3. Select the downloaded firmware file (.bin)
4. Wait for installation to complete – the amplifier will restart itself in approx. 2 minutes.

During the firmware update process, the status bar may stop periodically.

We ask for your patience and advise against interrupting the update, as it can take up to three minutes to complete.

5. Reconnect to the PowerZone Connect™ amplifier's Wi-Fi
6. Confirm successful update by refreshing the browser and check the firmware version (Settings > Device)

